

Table of Contents

Chapter 1: Introduction

1

Chapter 2

2.1 Connectors Jumpers -----	3
2.2 Install AMD K6-III CPU -----	7
2.3 Set CPU Voltage-----	8
2.4 Install 586 CPU -----	9
2.4-1 Quick to Setting for BUS Clock 100 MHZ frequency CPU-----	9
2.4-2 Quick to Setting for INTEL PENTIUM MMX/AMD K6 MMX/CYRIX M2 MMX CLK &Voltage-----	11
2.4-3 Quick to Setting to INTEL PENTIUM &AMD K5 CPU CLK & Voltage-----	15
2.4-4 Quick to Setting for CYRIX 6X86 CPU CLK& Voltage-----	17
2.5 PCB Layout and Relevant Positions for CLK & Voltage-----	18
2.6 CPU Multi Ratio & BUS CLK,AGP CLK &PCI CLK-----	19
2.7 Support 168 pin DIMMX2 &72 pin SIMMX2 FOR SDRAM/FPM/EDO DRAM-----	20
2.8 Install DRAM AND SDRAM Memory-----	22

Chapter 3

- 3.1 Main Menu ----- 23
- 3.2 Standard CMOS Setup ----- 28
- 3.3 BIOS Features Setup ----- 32
- 3.4 Supervisor/User Password Setting ----- 37
- 3.5 Setup/Integrated Peripherals Features Setup ----- 38
- 3.6 Setup Power Management ----- 43
- 3.7 Setup PnP/PCI Configuration ----- 47

Chapter

INTRODUCTION

The mainboard is high-performance person computer based on Intel Pentium And AMD K6-III processor and equipped with three PCI slots,one AMR slot And VGA on board.,this motherboard use the high integrated M1561 super-Socket-7 North bridge , the M 1561 integrates the following functionalities in a Unified architecture pc, 3D Graphics, 2-D windows acceleration, VGA display Controller,PCI Bus interface.,support the 66/100 socket-7, Uses 66/100MHz SDRAM with LVTLL input/output chip supports up to four memory DIMMS.,power supplies are 2.5V for the core and 3.3V for most of the reference is needed for the 5V tolerant PCI inputs.,PC99 compliant.

The South bridge 1535D provides the best desktop ,integrates AC-LINK Host Controller,Hardware Sound compatibility,Host Singal Processing(HSP) Software modem, ACPI support ,Ultra-66 IDE Master controller,4-port USB SMBus controller,PS/2 Keyboard/Mouse controller,the super Controller,2 serial Port/1 parallel port ,support fant IR.The built-in audio in M1535D is an advanced PCI audio accelewave table synthesis

Features:

☞ CPU ZIF Socket

- ZIF 321-pin ZIF socket. Socket 7.
- Intel Pentium 90, 100, 120, 133, 150, 166, 180, and 200MHz.
- Intel Pentium-MMX 166/200/233 MHz
- Switch Voltage Regulator for P55C
- Cyrix M1 P120+/P133+/P150+/P166+/CYRIX M2(MMX)
- AMD K5 /K6 (MMX) CPU/K6-2/K6-III.

☞ Chipset

- Main board: ALI ALADDIN M1543C/M1542 CHIPSET
- Host bus at 60,66,75,83,100MHZ
- M1543C-B1 chipset support Ultra DMA 66

☞ Memory, SIMM 1-2,DIMMx2

- The RAM MODULE assortment is flexible.
- There are two 168 pin DIMM sockets and two 72 pin SIMM sockets on the motherboard.
- You can use 3.3V SDRAM and 5V EDO RAM on the 168 pin DIMM socket of the motherboard. The total capacity is up to 256MB.
- Otherwise, you can use 5V EDO RAM and FPM RAM on the 72 pin SIMM socket of the motherboard. The total capacity is up to 128MB.
- SIMM RAM MODULE and DIMM RAM MODULE, The total capacity is up to 384MB.

☞ Pipe Line Cache

- 64 bit Cache.
- Implements level two (L2), external cache write through or write-back design, featuring two pipe line sram on board.
- External cache size is on board 512K Cache RAM.

☞ Expansion Slots, ISA1-ISA3,PCI1-PCI3, AGP1

- Builds three 16-bit ISA slots and three 32-bit PCI slots (PCI 1 to PCI 3)
- Support one AGP (Accelerated Graphics Port) slot, 66MHZ protocol.

☞ **Enhanced PCI IDE & ISA I/O**

- Built in enhanced PCI Local Bus IDE controller.
- Ultra DMA/33/66 Support BUS master IDE
- Supports 4 PCI IDE devices. PIO Mode 5 and DMA Mode 2 and CDROM driver. BIOS auto detects HDD.
- Two serial ports with 16550, Infrared port (IR), one Parallel port with ECP/EPP pocket device, bi-direction, one PS/2 mouse port, two FDD. Through ECP/EPP, the board increases the performance of printer or connect SCSI or IDE devices.
- Controlled by BIOS. Disable I/O function by BIOS in order to Install an I/O card. Set COM 1 and COM 2 as COM 3 and COM 4 by BIOS.

☞ **System Green BIOS**

- Flash BIOS option on board, AWARD deep green BIOS, PLUG & PLAY, PnP function.
- Auto configuration for PCI add-on cards.
- I/O Device's power saving, APM & SMI.
- Implements the EPA Energy Star PC specification with Deep Green system design.

Full-on : System runs in full speed CPU clock.

Doze : System scales-down CPU clock.

Standby : System scales-down the CPU clock, and turns off video display, and spin-off hard disk driver.

Suspend: With SMM CPU, stop CPU clock in suspend mode.


☞ **ACPI (ATX Power Supply Mode)**

- power management. Soft-off Control
- Support Modem Ring-in
- RTC Alarm wake up
- KB Power on/off hot key


☞ **Power Connect**

- AT/ATX option

2.1 Connectors & Jumpers

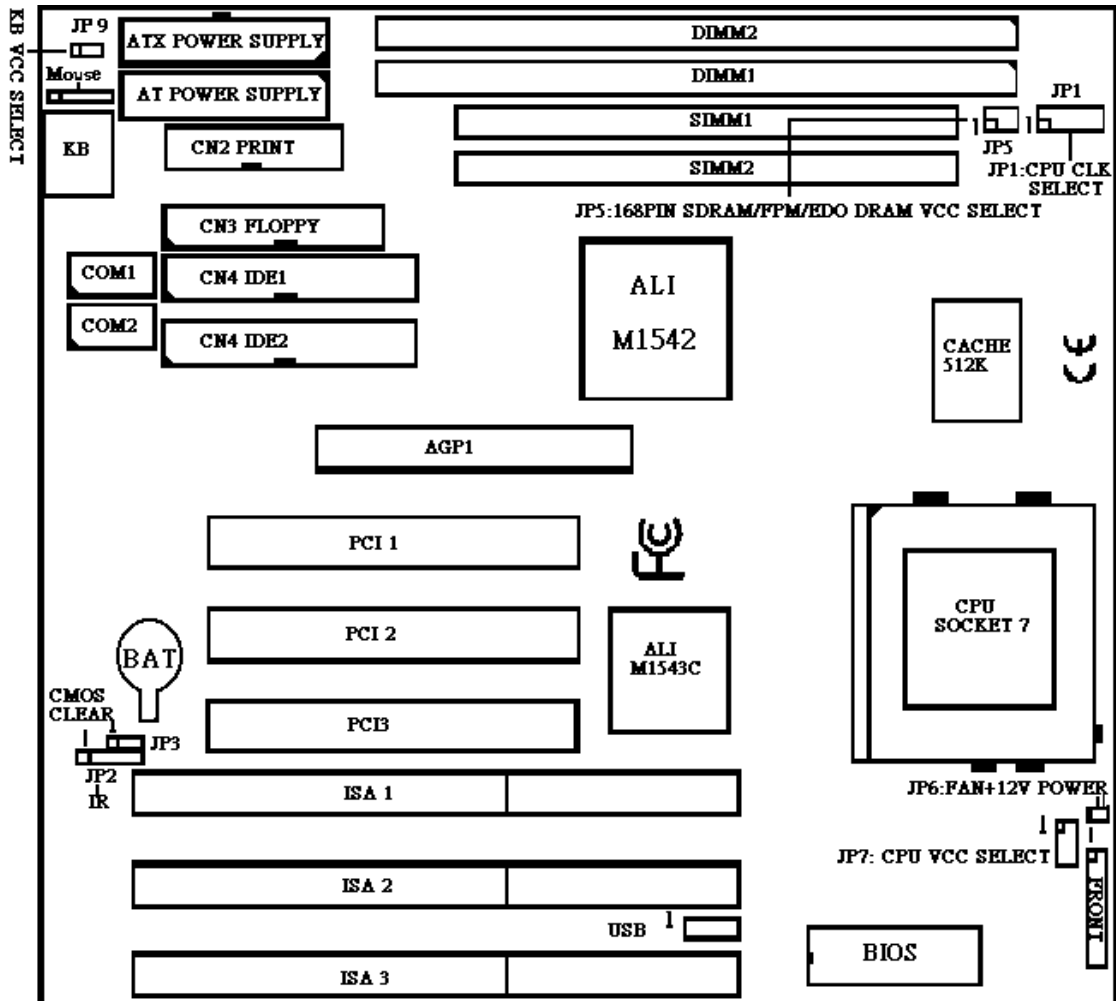

Ultra DMA 66 Cable(40 pin connector & 80 line cable)

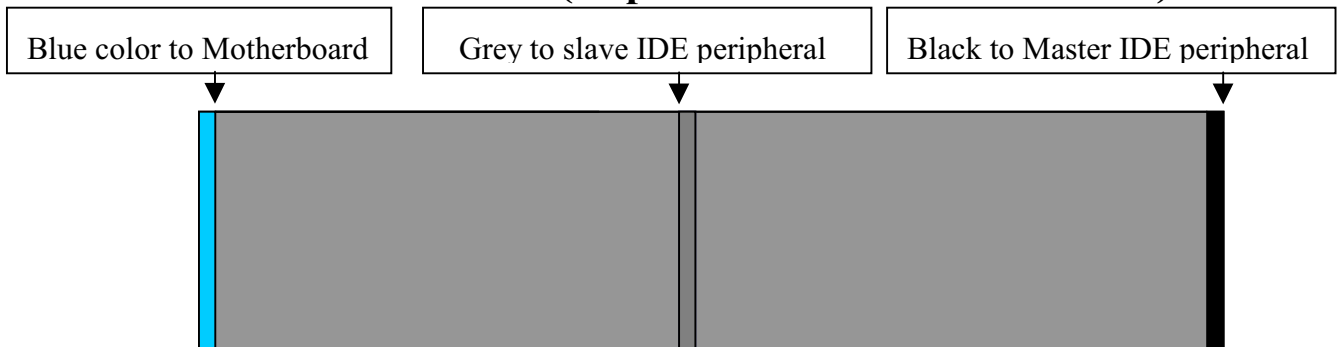

FRONT1:Power LED, Speaker, SLEEP LED, ATX POWER SWITCH, Reset, Hard disk LED, Turbo LED, Turbo Switch.

Speaker				Sleep LED			Power LED		
10	9	8	7	6	5	4	3	2	1
20	19	18	17	16	15	14	13	12	11
RESET		Turbo Switch		Turbo LED		HDD LED		ATX POWER SWITCH	

FRONT1(1-3): Power LED

PINOUT	ASSIGNMENTS
1	LED OUTPUT
2	NC
3	GND

FRONT1(4-5): SLEEP LED

PINOUT	ASSIGNMENTS
1	LED OUTPUT
2	HIGH

FRONT1(6): NOT CONNECT

FRONT1(7-10): Speaker Connect

PINOUT	ASSIGNMENTS
1	speaker output
2	GND
3	GND
4	VCC

FRONT1(11-12): ATX POWER Switch Connect

FRONT1(13-14): Hard Disk LED connect


PINOUT	ASSIGNMENTS
1	VCC
2	LED1 Signal

FRONT1(15-16): Turbo LED connect

PINOUT	ASSIGNMENTS
1	VCC
2	LED1 Signal

FRONT1(17-18): Turbo switch connect (Default close)

FRONT1(19-20): RESET switch connect

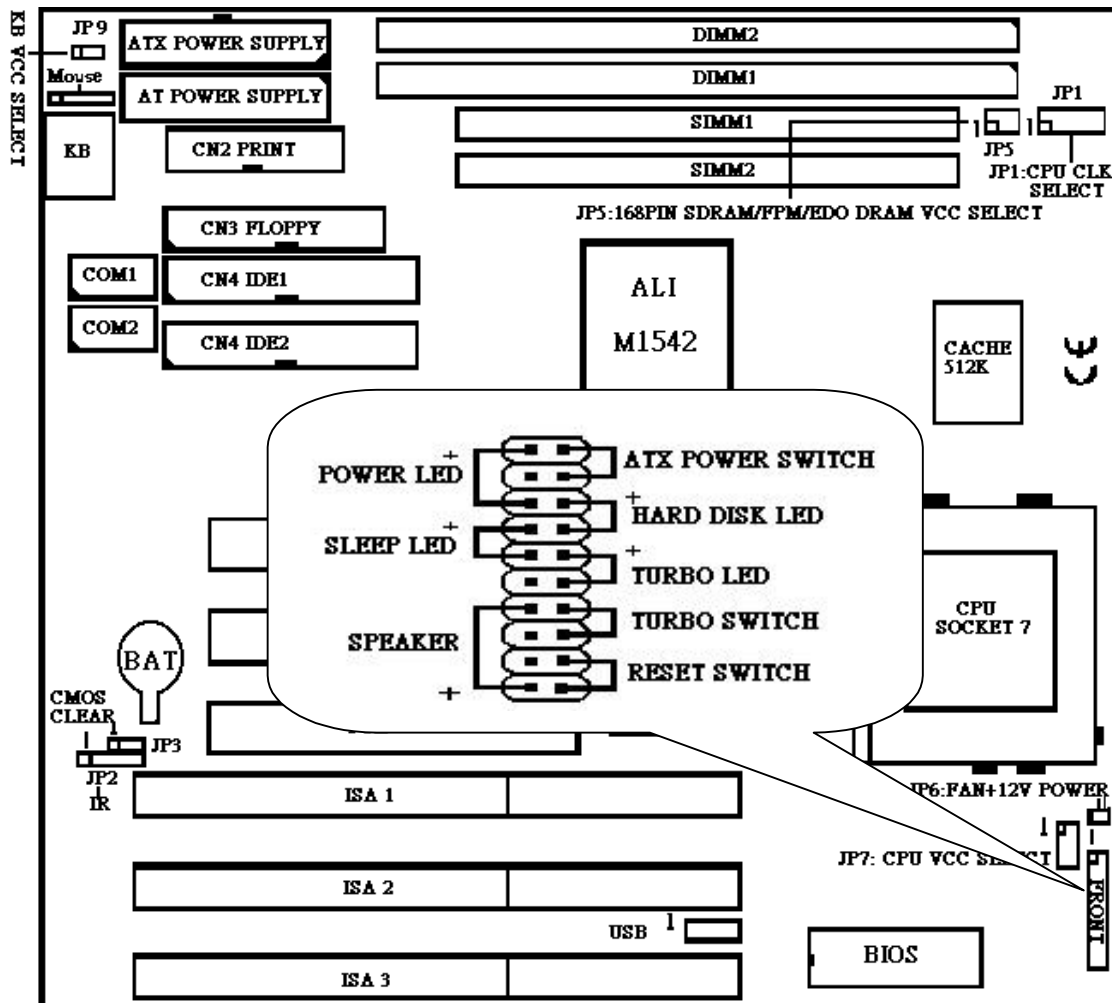

JP1: CPU CLK SELECT. Please refer section 2-4 relating

JP2: IR connect.

PINOUT	ASSIGNMENTS
1	VCC
2	FIRRX Signal
3	IRRX2 Signal
4	GND
5	IRTX2 Signal

JP3: COMS CLEAR SETTING

JP3	Function
1-2	NORMAL
2-3	CMOS CLEAR

JP5: FOR 168 PIN SDRAM (Synchronous DRAM)
OR FPM/EDO DRAM Voltage SELECT

JP5	Function
1-2,1-2	+5V EDO/FPM
2-3,2-3	+3.3V SDRAM

JP6: FAN +12 POWER

+12V	GND
------	-----

JP7: CPU Voltage Jumper setting. Please refer section 2-3 relating.

JP9: KB VCC VOLTAGE SELECT

JP8	Function
1-2	+5V
2-3	+5VSB

MOUSE1: PS/2 MOUSE CONNECT

PINOUT	ASSIGNMENTS
1	MDATA
2	N.C
3	GND
4	VCC
5	MSCLK

KBCONN1: AT KEYBOARD CONNECT**J1: ATX POWER SUPPLY CONNECT****CN1: AT POWER SUPPLY CONNECT****CN4: Primary IDE CONNECT****CN5: Secondary IDE CONNECT****CN3: Floppy CONNECT****CN2: PRINT CONNECT****COM1: COM1 CONNECT****COM2: COM2 CONNECT****USB-1: USB-1 CONNECT**

PINOUT	ASSIGNMENTS
1	VCC
3	USBP0-
5	USBP0+
7	GND_A
9	GND_B







USB-2: USB-2 CONNECT

PINOUT	ASSIGNMENTS
2	VCC
4	USBP1-
6	USBP1+
8	GND_A
10	GND_B


SIMM 1-2: 72 pin DRAM Module Socket**DIMM 1-2: 168 pin SDRAM Module Socket****U11: LM 75 FOR CPU Temperature detect****U10: CPU ZIF SOCKET 7**

2.2 Install AMD K6-III CPU












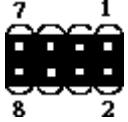




(1)CPU CLK

PRODUCT NAME	CPU SPEED MHZ	BUS MHZ	JP1	MULTIPLIER
AMDK6-III 400	400	100		4X
AMDK6-III 450	450	100		4.5X
AMDK6-III 475	475	95		5X
AMDK6-III 500	500	100		5X
AMDK6-III 523	523	95		5.5X
AMDK6-III 550	550	100		5.5X
















(2)SET CPU VOLTAGE

CPU POWER TYPE / JUMPER	JP7
DUAL 2.4V&3.3V	

JP7: SET CPU VOLTAGE

CPU POWER MODE	JP7	EXAMPLE	CPU POWER MODE	JP7	EXAMPLE
ONLY 3.52V		AMD-K5 CYRIX M1	DUAL 2.7V & 3.3V		FUTURE CPU
ONLY 3.4V		FUTURE CPU	DUAL 2.6V & 3.3V		FUTURE CPU
ONLY 3.3V		INTEL PENTIUM	DUAL 2.5V & 3.3V		FUTURE CPU
DUAL 3.2V & 3.3V		AMD K6 PR-233 MHz	DUAL 2.4V&3.3V		AMD K6-III
DUAL 3.1V & 3.3V		FUTURE CPU	DUAL 2.3V & 3.3V		AMD K6-2 550MHz
DUAL 3.0V &3.3V		FUTURE CPU	DUAL 2.2V & 3.3V		AMD-K6 266 /300MHZ
DUAL 2.9V & 3.3V		IBM 6X86MX AMD -K6	DUAL 2.1V & 3.3V		FUTURE CPU
DUAL 2.8V & 3.3V		IBM 6X86L INTEL PENTIUM	DUAL 2.0V & 3.3V		FUTURE CPU

JP1 : CPU Multi Ratio & BUS CLK

CPU Ratio	JP1(1-6PIN)	BUS CLK	JP1 (7-12PIN)
1.5X		60MHZ	
2.0X		66MHZ	
2.5X		75MHZ	
3.0X		83MHZ	
3.5X		95MHZ	
4.0X		100MHZ	
4.5X			
5.0X			
5.5X			

INSTALL 586 CPU

2.4-1 QUICK TO SETTING FOR BUS CLOCK 100HZ FREQUENCY CPU

A: AMD-K6-2

(1) CPU CLK

Product Name	CPU Speed (MHZ)	BUS CLK (MHZ)	JP1		Multiplier
AMD-K6-PR200	200(MHZ)	100	1	2	2X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
AMD-K6-PR250	250	100	1	2	2.5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
AMD-K6-PR300	300	100	1	2	3X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	

Product Name	CPU Speed (MHZ)	BUS CLK (MHZ)	JP1		Multiplier
AMD-K6-PR350	350	100	1	2	3.5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
AMD-K6-PR400	400	100	1	2	4X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
AMD-K6-PR450	450	100	1	2	4.5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	

Product Name	CPU Speed	BUS CLK (MHZ)	JP1		Multiplier
AMD-K6-PR500	500	100	1	2	5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
AMD-K6-PR550	550	100	1	2	5.5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	

(2) SET CPU Voltage

CPU POWER TYPE/JUMPER	JP7			
Dual 2.2V & 3.3V OR Dual 2.2V & 3.45V	7	5	3	1
	8	6	4	2

In case the marking voltage on CPU is not meet up with our manual, Please setup according to CPU marking, You can reference our manual section 2-3: the jumper setting of CPU Voltage.

For better reliability, we suggest Using PC-100 SDRAM for 100MHZ CPU.

B: CYRIX-M2

(1) CPU CLK

Product Name	CPU Speed	BUS	JP1		Multiplier
Cyrrix-M2-PR233	200	100	1	2	2X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
CYRIX-M2-PR333	250	100	1	2	2.5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
CYRIX-M2-PR350	300	100	1	2	3X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	

(2) SET CPU VOLTAGE

CPU POWER TYPE/JUMPER	JP7								
DUAL 2.9V & 3.3V	<table border="1" data-bbox="686 488 1284 622"><tr><td data-bbox="686 488 849 555">7</td><td data-bbox="849 488 1011 555">5</td><td data-bbox="1011 488 1155 555">3</td><td data-bbox="1155 488 1284 555">1</td></tr><tr><td data-bbox="686 555 849 622">8</td><td data-bbox="849 555 1011 622">6</td><td data-bbox="1011 555 1155 622">4</td><td data-bbox="1155 555 1284 622">2</td></tr></table>	7	5	3	1	8	6	4	2
7	5	3	1						
8	6	4	2						

**In case the marking voltage on CPU is not meet up with our manual,
Please setup according to CPU marking,
You can reference our manual section 2-3: the jumper setting of CPU
Voltage.**

For better reliability,we suggest Using PC-100 SDRAM for 100MHZ CPU.

**2.4-2 QUICK TO SETTING FOR INTEL PENTIUM MMX /AMD K6
MMX /CYRIX M2 MMX CLK & VOLTAGE**

A/ INTEL PENTIUM MMX

(1) CPU CLK

Product Name	CPU Speed	BUS CLK	JP1		Multiplier
PENTIUM MMX-166	166	66	1	2	2.5x
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
PENTIUM- MMX-200	200	66	1	2	3X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
PENTIUM- MMX- 233	233	66	1	2	3.5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	

CPU POWER TYPE/JUMPER	JP7								
DUAL 2.8V & 3.3V	<table border="1" data-bbox="719 427 1268 539"><tbody><tr><td data-bbox="719 427 863 495">7</td><td data-bbox="863 427 991 495">5</td><td data-bbox="991 427 1134 495">3</td><td data-bbox="1134 427 1268 495">1</td></tr><tr><td data-bbox="719 495 863 539">8</td><td data-bbox="863 495 991 539">6</td><td data-bbox="991 495 1134 539">4</td><td data-bbox="1134 495 1268 539">2</td></tr></tbody></table>	7	5	3	1	8	6	4	2
7	5	3	1						
8	6	4	2						

AMD K6 MMX

(1) CPU CLK

Product Name	CPU Speed	BUS CLK	JP1		Multiplier
<p>AMD K6-166</p>	<p>166</p>	<p>66</p>	1	2	<p>2.5X</p>
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
<p>AMD K6-200</p>	<p>200</p>	<p>66</p>	1	2	<p>3X</p>
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
<p>AMD K6- 233</p>	<p>233</p>	<p>66</p>	1	2	<p>3.5X</p>
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	

Product Name	CPU Speed	BUS CLK	JP1		Multiplier
AMD K6-266	266	66	1	2	4X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
AMD K6- 300	300	66	1	2	4.5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
AMD K6-333	333	66	1	2	5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
AMD K6- 333	333	95	1	2	3.5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	

Product Name	CPU Speed	BUS CLK	JP1		Multiplier
AMD K6-366	366	66	1	2	5.5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
AMD K6- 380	380	95	1	2	4X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	

SET CPU VOLTAGE

CPU TYPE	CPU POWER TYPE /JUMPER	JP7								
<p>AMD-K6-166/200</p>	<p>DUAL 2.9V & 3.3V</p>	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="background-color: #cccccc;">7</td> <td>5</td> <td>3</td> <td style="background-color: #cccccc;">1</td> </tr> <tr> <td style="background-color: #cccccc;">8</td> <td>6</td> <td>4</td> <td style="background-color: #cccccc;">2</td> </tr> </table>	7	5	3	1	8	6	4	2
7	5	3	1							
8	6	4	2							
<p>AMD-K6-233 /266</p>	<p>DUAL 3.2V & 3.3V</p>	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="background-color: #cccccc;">7</td> <td style="background-color: #cccccc;">5</td> <td>3</td> <td>1</td> </tr> <tr> <td style="background-color: #cccccc;">8</td> <td style="background-color: #cccccc;">6</td> <td>4</td> <td>2</td> </tr> </table>	7	5	3	1	8	6	4	2
7	5	3	1							
8	6	4	2							
<p>AMD-K6-266/300 AMD-K6-333</p>	<p>DUAL 2.2V &3.3V DUAL 2.2V &3.45V</p>	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>7</td> <td>5</td> <td style="background-color: #cccccc;">3</td> <td>1</td> </tr> <tr> <td>8</td> <td>6</td> <td style="background-color: #cccccc;">4</td> <td>2</td> </tr> </table>	7	5	3	1	8	6	4	2
7	5	3	1							
8	6	4	2							












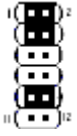








**In case the marking voltage on CPU is not meet up with our manual,
Please setup according to CPU marking,
You can reference our manual section 2-3: the jumper setting of CPU
Voltage.
Only use ICS9148B-36 frequency Generator can be support bus CLK 95
MHZ.
For better reliability,we suggest Using PC-100 SDRAM for 100MHZ CPU.**

CYRIX M2 MMX

(1) CPU CLK

Product Name	CPU Speed (MHZ)	BUS CLK (MHZ)	JP1		Multiplier
Cyrix-M2-PR166	150	60	1	2	2.5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
CYRIX-M2-PR166	133	66	1	2	2X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
CYRIX-M2-PR200	166	66	1	2	2.5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	

Product Name	CPU Speed (MHZ)	BUS CLK (MHZ)	JP1		Multiplier
Cyrrix-M2-PR200	150	75	1	2	2X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
CYRIX-M2-PR233	188	75	1	2	2.5X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
CYRIX-M2-PR233	166	83	1	2	2X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	

PRODUCT NAME	CPU SPEED	BUS MHZ	JP1	MULTIPLIER	JP7	CPU POWER TYPE
CYRIX-M2 PR266	208 MHZ	83		2.5X		DUAL 2.9V&3.3V
CYRIX-M2 PR300	233	66		3.5X		DUAL 2.9V&3.3V
CYRIX-M2 PR300	225	75		3X		DUAL 2.9V&3.3V
CYRIX-M2 PR333	250	83		3X		DUAL 2.9V&3.3V
CYRIX-M2 PR333	263	75		3.5X		DUAL 2.9V&3.3V
CYRIX-M2 PR350	291	83		3.5X		DUAL 2.9V&3.3V
CYRIX-M2 PR350	300	75		4X		DUAL 2.9V&3.3V
CYRIX-M2 PR366	250	100		2.5X		DUAL 2.9V&3.3V
CYRIX-M2 PR400	285	95		3X		DUAL 2.9V&3.3V
CYRIX-M2 PR433	300	100		3X		DUAL 2.9V&3.3V

**2-4-3 QUICK TO SETTING FOR INTEL PENTIUM & AMD K5 CPU
CLK & VOLTAGE**

Product Name	CPU Speed	BUS CLK	JP1				Multiplie
PENTIUM -90 AMD K5-PR90 AMD K5- PR120	90	60	1	2	1.5x		
			3	4			
			5	6			
			7	8			
			9	10			
			11	12			
PENTIUM-100 AMD K5- PR100 AMD K5- PR133	100	66	1	2	1.5X		
			3	4			
			5	6			
			7	8			
			9	10			
			11	12			
PENTIUM-120 AMD K5- PR150	120	60	1	2	2X		
			3	4			
			5	6			
			7	8			
			9	10			
			11	12			

Product Name	CPU Speed	BUS CLK	JP1		Multiplie	
PENTIUM - 133	133	66	1	2		2X
			3	4		
			5	6		
			7	8		
			9	10		
			11	12		
PENTIUM-150	150	60	1	2		2.5X
			3	4		
			5	6		
			7	8		
			9	10		
			11	12		
PENTIUM-166 AMD K5- PR166	166	66	1	2		2.5X
			3	4		
			5	6		
			7	8		
			9	10		
			11	12		

Product Name	CPU Speed	BUS CLK	JP1				Multiplie
PENTIUM - 180	180	60	1	2	3X		
			3	4			
			5	6			
			7	8			
			9	10			
			11	12			
PENTIUM-200	200	66	1	2	3X		
			3	4			
			5	6			
			7	8			
			9	10			
			11	12			

PENTIUM 90-200	ONLY 3.3V	<table border="1"> <tbody> <tr> <td>7</td> <td>5</td> <td>3</td> <td>1</td> </tr> <tr> <td>8</td> <td>6</td> <td>4</td> <td>2</td> </tr> </tbody> </table>	7	5	3	1	8	6	4	2
7	5	3	1							
8	6	4	2							
AMD-K5 PR90-PR166	ONLY 3.52V	<table border="1"> <tbody> <tr> <td>7</td> <td>5</td> <td>3</td> <td>1</td> </tr> <tr> <td>8</td> <td>6</td> <td>4</td> <td>2</td> </tr> </tbody> </table>	7	5	3	1	8	6	4	2
7	5	3	1							
8	6	4	2							

2.4-4 QUICK TO SETTING FOR CYRIX 6X86 CPU CLK & VOLTAGE

Product Name	CPU Speed	BUS CLK	JP1		Multiplie
<p>6X86-P150-GP</p>	<p>120</p>	<p>60</p>	1	2	<p>2X</p>
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
<p>6X86-P166-GP</p>	<p>133</p>	<p>66</p>	1	2	<p>2X</p>
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	
<p>6X86-P200-GP</p>	<p>150</p>	<p>75</p>	1	2	<p>2X</p>
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	

SET CPU VOLTAGE

CPU Power Type/Jumper	JP7								
ONLY 3.52V	<table border="1"><tr><td data-bbox="831 412 943 479">7</td><td data-bbox="946 412 1058 479">5</td><td data-bbox="1061 412 1173 479">3</td><td data-bbox="1176 412 1287 479">1</td></tr><tr><td data-bbox="831 483 943 551">8</td><td data-bbox="946 483 1058 551">6</td><td data-bbox="1061 483 1173 551">4</td><td data-bbox="1176 483 1287 551">2</td></tr></table>	7	5	3	1	8	6	4	2
7	5	3	1						
8	6	4	2						
ONLY 3.3V	<table border="1"><tr><td data-bbox="831 620 943 687">7</td><td data-bbox="946 620 1058 687">5</td><td data-bbox="1061 620 1173 687">3</td><td data-bbox="1176 620 1287 687">1</td></tr><tr><td data-bbox="831 692 943 759">8</td><td data-bbox="946 692 1058 759">6</td><td data-bbox="1061 692 1173 759">4</td><td data-bbox="1176 692 1287 759">2</td></tr></table>	7	5	3	1	8	6	4	2
7	5	3	1						
8	6	4	2						
ONLY 2.8V & 3.3V	<table border="1"><tr><td data-bbox="831 815 943 882">7</td><td data-bbox="946 815 1058 882">5</td><td data-bbox="1061 815 1173 882">3</td><td data-bbox="1176 815 1287 882">1</td></tr><tr><td data-bbox="831 887 943 954">8</td><td data-bbox="946 887 1058 954">6</td><td data-bbox="1061 887 1173 954">4</td><td data-bbox="1176 887 1287 954">2</td></tr></table>	7	5	3	1	8	6	4	2
7	5	3	1						
8	6	4	2						

Product Name	CPU Speed	BUS CLK	JP1		Multiplie
CYRIX-M2-PR350	300	75	1	2	4X
			3	4	
			5	6	
			7	8	
			9	10	
			11	12	

SET CPU VOLTAGE

CPU POWER TYPE/JUMPER	CPU TYPE	JP7			
DUAL 2.9V & 3.3V	IBM-6X86MXPR166/PR200/PR233 PR266	7	5	3	1
		8	6	4	2

2.8 Install DRAM AND SDRM Memory

The Board supports different types 72-pin SIMM and DIMM whatever single side or double side. There is no jumper nor connector needed for memory configuration. The RAM MODULE assortments is flexible. There are two 168 pin DIMM sockets and two 72 pin SIMM sockets on the motherboard.

You can use 3.3V SDRAM and 5V EDO RAM on the 168 pin DIMM socket of the motherboard. The total capacity is up to 256MB. Otherwise, you can use 5V EDO RAM and FPM RAM on the 72 pin SIMM socket of the motherboard. The total capacity is up to 128MB. SIMM RAM MODULE and DIMM RAM MODULE, The total capacity is up to 384MB.

It also supports both fast page DRAM or EDO DRAM SIMM, but can't use them at same bank, i.e. one SIMM is fast page DRAM and the other is EDO SIMM.

SIMM can be use parity (x36) or none parity (x32). The 70ns fast page SIMM or 60ns EDO DRAM needed, at least.

Example:

BANK 0&1, DIMM	BANK 2&3, DIMM2	BANK 4&5, SIMM1,2	TOTAL
8MB	NONE	NONE	8MB
NONE	8MB	NONE	8MB
NONE	NONE	8MB	8MB
8MB	8MB	NONE	16MB
NONE	8MB	8MB	16MB
8MB	NONE	8MB	16MB
8MB	8MB	8MB	24MB
16MB	16MB	NONE	32MB
32MB	NONE	32MB	64MB
32MB	32MB	NONE	64MB
64MB	64MB	NONE	128MB
128MB	128MB	NONE	256MB
128MB	128MB	128MB	384MB

3.1 Main Menu

Once you enter the Award BIOS CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and two exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

ROM PCI/ISA BIOS (2A5KFF9A)
CMOS SETUP UTILITY
AWARD SOFTWARE, INC.

STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT SETUP	IDE HDD AUTO DETECTION
PNP/PCI CONFIGURATION SETUP	HDD LOW LEVEL FORMAT
LOAD BIOS DEFAULTS	SAVE & EXIT SETUP
LOAD SETUP DEFAULTS	EXIT WITHOUT SAVING
Esc : Quit	↑↓→← : Select Item
F10 : Save & Exit Setup	(Shift) F2 : Color
Time, Date,	Hard Disk Type...

Note that a brief description of each highlighted selection appears at the bottom of the screen.

Setup Items

The main menu includes the following main setup categories. Recall that some systems may not include all entries.

Standard CMOS Setup

This setup page includes all the items in a standard, AT-compatible BIOS.

BIOS Features

This setup page includes all the items of Award special enhanced features.

Super/User Password Setting

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

Chipset Features Setup

This setup page includes all the items of chipset special features.

Power Management Setup

This entry only appears if your system supports Power Management, “Green PC”, standards.

PNP/PCI Configuration Setup

This entry appears if your system supports PNP/PCI.

Load BIOS Defaults

The BIOS defaults have been set by the manufacturer and represent settings which provide the minimum requirements for your system to operate.

Load Setup Defaults

The chipset defaults are settings which provide for maximum system performance. While Award has designed the custom BIOS to maximize performance, the manufacturer has the right to change these defaults to meet their needs.

Integrated Peripherals

This section page includes all the items of IDE hard drive and Programmed Input/ Output features.

IDE HDD Auto Detection

Automatically detect and configure hard disk parameters. The Award BIOS includes this ability in the event you are uncertain of your hard disk’s parameters.

HDD Low Level Format

If supported by your system, this provides a hard disk low level format utility.

Save & Exit Setup

Save CMOS value changes to CMOS and exit setup.

Exit Without Save

Abandon all CMOS value changes and exit setup.

3.2 Standard CMOS Setup

The items in Standard CMOS Setup Menu are divided into 10 categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

ROM PCI/ISA BIOS (2A5KKF9A)
STANDARD CMOS SETUP
AWARD SOFTWARE. INC.

Date (mm:dd:yy) : Fri, Dec 6 1996								
Time (hh:mm:ss) : 15 : 40 : 00								
HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDE	SECTOR	MODE
Primary Master	: Auto	0	0	0	0	0	0	AUTO
Primary Slave	: Auto	0	0	0	0	0	0	AUTO
Secondary Master	: Auto	0	0	0	0	0	0	AUTO
Secondary Slave	: Auto	0	0	0	0	0	0	AUTO
Drive A : 1.44M, 3.5in								
Drive B : None								
						Base Memory : 640K		
						Extended Memory : 15360 K		
						Other Memory : 384K		
						Total Memory : 16384K		
Video : EGA/VGA								
Halt On : All ,But Keyboard								
ESC : Quit			↑↓→← : Select Item			PU/PD/+/- : Modify		
F1 : Help			(Shift) F2 : Change Color					

Date

The date format is <day>, <date> <month> <year>. Press<F3> to show the calendar.

day	The day, from Sun to Sat, determined by the BIOS and is display-only
date	The date, from 1 to 31 (or the maximum allowed in the month)
month	The month, Jan through Dec.
year	The year, from 1900 through 2099

Time

The time format is <hour><minute><second>. The time is calculated based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00

Daylight saving

The category adds one hour to the clock when daylight-saving time begins. It also subtracts one hour when standard time returns.

Enabled	Enabled daylight-saving
Disabled	Disabled daylight-saving

Primary Master/ Primary Slave/Secondary Master/ Secondary Slave

The categories identify the types of 2 channels that have been installed in the computer. There are 45 predefined types and 4 user definable types are for Enhanced IDE BIOS. Type 1 to Type 45 are predefined. Type user is user-definable.

Press PgUp or PgDn to select a numbered hard disk type or type the number and press <Enter>. Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category. If your hard disk drive type is not matched or listed, you can use Type “User” to define your own drive type manually.

If you select Type “User”, you will need to know the information listed below. Enter the information directly from the keyboard and press <Enter>. This information should be included in the documentation from your hard disk vendor or the system manufacturer.

If the controller of HDD interface is ESDI, the selection shall be “Type 1”.
If the controller of HDD interface is SCSI, the selection shall be “None”.

If you select Type “Auto”, BIOS will Auto-Detect the HDD & CD-ROM Drive at the POST stage and showing the IDE for HDD & CD-ROM Drive.

TYPE	drive type
CYLS.	number of cylinders
HEADS	number of heads
PRECOMP	write precom
LANDZONE	landing zone
SECTORS	number of sectors
MODE	mode type

If a hard disk has not been installed select NONE and press <Enter>.

Drive A Type/ Drive B Type

The category identifies the types of floppy disk drive A or drive B that have been installed in the computer.

None	No floppy drive installed
360K, 5.25 in	5-1/4 inch PC-type standard drive; 360 kilobyte capacity
1.2M, 5.25 in	5-1/4 inch AT-type high-density drive; 1.2 megabyte capacity
720M, 3.5 in	3-1/2 inch double-sided drive; 720 kilobyte capacity
1.44M, 3.5 in	3-1/2 inch double-sided drive; 1.44 megabyte capacity
2.88M, 3.5 in	3-1/2 inch double-sided drive; 2.88 megabyte capacity

Video

The category selects the type of video adapter used for the primary system monitor. Although secondary monitors are supported, you do not have to select the type in Setup.

EGA/VGA	Enhanced Graphics Adapter/Video Graphics Array, For EGA, VGA, SEGA, SVGA, or PGA monitor adapters.
CGA 40	Color Graphics Adapter, power up in 40 column mode
CGA 80	Color Graphics Adapter, power up in 80 column mode
MONO	Monochrome adapter, includes high resolution monochrome adapters

Error Halt

The category determines whether the computer will stop if an error is detected during power up.

No errors	Whenever the BIOS detects a non-fatal error the system will be stopped and you will be prompted.
All errors	The system boot will not be stopped for any error that may be detected.
All, But Keyboard	The system boot will not stop for a keyboard error, it will stop for all other errors.
All, But Diskette	The system boot will not stop for a disk error; it will stop for all other errors.
All, But Disk/Key	The system boot will not stop for a keyboard or disk error; it will stop for all other errors.

Memory

The category is display-only which is determined by POST (Power on Self Test) of the BIOS.

Base Memory

The POST will determine the amount of base (or conventional) memory installed in the system. The value of the base memory is typically 512K for systems with 512K memory installed on the motherboard, or 640K for system with 640K or more memory installed on the motherboard.

Extended Memory

The BIOS determines how much extended memory is present during the POST. This is the amount of memory located above 1MB in the CPU'S memory address map.

Other Memory

This refers to the memory located in the 640K to 1024K address space. This is memory that can be used for different applications. DOS uses this area to load device drivers in an effort to keep as much base memory free for application programs. The BIOS is the most frequent user of this RAM area since this is where it shadows RAM.

3.3 BIOS Features Setup

This section allows you to configure your system for basic operation. You have the opportunity to select the system's default speed, boot-up sequence, keyboard operation, shadowing and security.

ROM PCI/ISA BIOS (2A5KKF9A)
BIOS FEATURES SETUP
AWARD SOFTWARE. INC.

Virus Warning	: Disabled	Video BIOS Shadow	: Enabled
CPU Internal Cache	: Enabled	C8000-CBFFF Shadow	: Disabled
External Cache	: Enabled	CC000-CFFFF Shadow	: Disabled
Quick Power On Self Test	: Enabled	D0000-D3FFF Shadow	: Disabled
Boot Sequence	: C, A, SCSI	D4000-D7FFF Shadow	: Disabled
Swap Floppy Drive	: Disabled	D8000-DBFFF Shadow	: Disabled
Boot Up Floppy Seek	: Enabled	DC000-DFFFF Shadow	: Disabled
Boot Up Numlock Status	: On		
Boot Up System Speed	: High		
Gate A20 Option	: Fast		
Typematic Rate Setting	: Disabled		
Typematic Rate (Chars/Sec)	: 6		
Typematic Delay (Msec)	: 250		
Security Option	: Setup	ESC : Quit	↑↓→← : Select Item
PCI/VGA Palett Snoop	: Disabled	F1 : Help	PU/PD/+/- : Modify
Assign IRQ For VGA	: Enabled	F5 : Old Values	(Shift) F2 : Color
OS Select For DRAM >64MB	: Non-OS2	F6 : Load BIOS Defaults	
Report No FDD For WIN 95	: No	F7 : Load Setup Defaults	

Virus Warning

When this item is enabled, the Award BIOS will monitor the boot sector and partition table of the hard disk drive for any attempt at modification. If an attempt is made, the BIOS will halt the system and the following error message will appear. Afterwards, if necessary, you will be able to run an antivirus program to locate and remove the problem before any damage is done.

!WARNING!
Disk boot sector is to be modified
Type "Y" to accept write or "N" to abort write
Award Software, Inc.

Enabled	Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector or hard disk partition table.
Disabled	No warning message will appear when anything attempts to access the boot sector or hard disk partition table.

NOTE:

Many disk diagnostic programs which attempt to access the boot sector table can cause the above warning message. If you will be running such a program, we recommend that you first disable Virus Protection before band.

CPU Internal Cache/External Cache

These two categories speed up memory access. However, it depends on CPU/chipset design. The default value is enable.

Enabled	Enabled cache
Disabled	Disable cache

Quick Power On Self Test

This category speeds up Power On Self Test (POST) after you power up the computer. If it is set to Enable, BIOS will shorten or skip some check items during POST.

Enabled	Enable quick POST
Disabled	Normal POST

Boot Sequence

The category determines which drive to search first for the disk operating system (i.e., DOS). Default value is A, C.

C,A	System will first search for hard disk drive then floppy disk drive.
A,C	System will first search for floppy disk drive then hard disk drive.
CDROM, C,A	System will first search for CDROM drive, then hard disk drive and then floppy disk drive.
C, CDROM, A	System will first search for hard disk drive, then CDROM drive, and then floppy disk drive.

Swap Floppy Drive

This item allows you to determine whether enable the swap floppy drive or not.

The choice: Enabled/Disabled.

Boot Up Floppy Seek

During POST, BIOS will determine if the floppy disk drive installed is 40 or 80 tracks. 360K type is 40 tracks while 720K, 1.2M and 1.44M are all 80 tracks.

Enabled	BIOS searches for floppy disk drive to determine if it is 40 or 80 tracks. Note that BIOS can not tell from 720K, 1.2M or 1.44M drive type as they are all 80 tracks.
Disabled	BIOS will not search for the type of floppy disk drive by track number. Note that there will not be any warning message if the drive installed is 360K.

Boot Up NumLock Status

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on.

On	Keypad is number keys
Off	Keypad is arrow keys

Boot Up System Speed

Selects the default system speed- the normal operating speed at power up.

High	Set the speed to high
Low	Set the speed to low

Gate A20 Option

This entry allows you to select how the gate A20 is handled. The gate A20 is a device used to address memory above 1 Mbytes. Initially, the gate A20 was handled via a pin on the keyboard. Today, while keyboards still provide this support, it is more common, and much faster, for the system chipset to provide support for gate A20.

Normal	keyboard
Fast	chipset

Typematic Rate Setting

This determines if the typematic rate is to be used. When disabled, continually holding down a key on your keyboard will generate only one instance. In other words, the BIOS will only report that the key is down.

When the typematic rate is enabled, the BIOS will report as before, but it will then wait a moment, and , if the key is still down, it will begin the report that the key has been depressed repeatedly. For example, you would use such a feature to accelerate cursor movements with the arrow keys.

Enabled	Enabled typematic rate
Disabled	Disable typematic rate

Typematic Rate (Chars/Sec)

When the typematic rate is enabled, this selection allows you select the rate at which the keys are accelerated.

6	6 characters per second
8	8 characters per second
10	10 characters per second
12	12 characters per second
15	15 characters per second
20	20 characters per second
24	24 characters per second
30	30 characters per second

Typematic Delay (Msec)

When the typematic rate is enabled, this selection allows you to select the delay between when the key was first depressed and when the acceleration begins.

250	250 msec
500	500 msec
750	750 msec
1000	1000 msec

Security Option

This category allows you to limit access to the system and Setup, or just to Setup.

System	The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
Setup	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt.

Note: To disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything and just press <Enter>, it will disable security. Once the security is disabled, the system will boot and you can enter Setup freely.

OS Select for DRAM > 64

This item allows you to access the memory that over 64MB in OS/2.

The choice: Non-OS2, OS2.

PCI/ VGA Palette Snoop

It determines whether the MPEG ISA/VESA VGA Cards can work with PCI/VGA or not.

Enabled	When PCI/VGA working with MPEG ISA/VESA VGA Card.
Disabled	When PCI/VGA not working with MPEG ISA/VESA VGA Card.

Video BIOS Shadow

Determines whether video BIOS will be copied to RAM. However, it is optional depending on chipset design. Video Shadow will increase the video speed.

Enabled	Video shadow is enabled
Disabled	Video shadow is disabled

C8000-CBFFF Shadow/DC000-DFFFF Shadow

These categories determine whether option ROMs will be copied to RAM. An example of such option ROM would be support of on-board SCSI.

Enabled	Optional shadow is enabled
Disabled	Optional shadow is Disabled

3.4 Supervisor/User Password Setting

You can set either supervisor or user password, or both of them. The differences between them are:

supervisor password: can enter and change the options of the setup menus.

user password: just can enter but do not have the right to change the options of the setup menus.

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

ENTER PASSWORD:

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

PASSWORD DISABLED.

When a password has been enabled, you will be prompted to enter it every time

you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option (see Section 4). If the Security option is set to “System”, the password will be required both at boot and at entry to Setup. If

set to “Setup”, prompting only occurs when trying to enter Setup.]

3.5 Setup/Integrated Peripherals Features Setup

ROM PCI/ISA BIOS (2A5KKF9A)

CHIPSET FEATURES SETUP

AWARD SOFTWARE. INC.

Auto Configuration	: Enabled	CPU Warning Temperature	: 60°C/133°F
L2 TAG RAM Size	: 8	Current CPU Temperature	: 51°C/123°F
AT Bus Clock	: CLK2/4	Shutdown Temperature	: 75°C/167°F
DRAM Timing	: Normal		
SDRAM CAS Latency	: 3		
Pipelined Function	: Enabled		
Graphics Aperture Size	: 64MB		
SDRAM Burst X-1-1-1-1-1-1	: Disabled		
DRAM Data Integrity Mode	: Disabled		
Memory Hole At 15-16M	: Disabled		
Host Read DRAM Command	: Bypass		
AGP Read Burst	: Enabled		
ISA Line Buffer	: Enabled		
Passive Release	: Disabled		
Delay Transaction	: Disabled		
Primary Frame Buffer	: Disabled		
VGA Frame buffer	: Disabled		
Data Merge	: Disabled		
IO Recovery Period	: 2US		
		Quit	↑↓→←:Select It
		F1 : Help	PU/PD/+/- : Modify
		F5 : Old Values	(Shift) F2 : Color
		F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

This section allows you to configure the system based on the specific features of the installed chipset. This chipset manages bus speeds and access to system memory resources, such as DRAM and the external cache. It also coordinates communications between the conventional ISA bus and the PCI bus. It must be stated that these items should never need to be altered. The default settings have been chosen because they provide the best operating conditions for your system. The only time you might consider making any changes would be if you discovered that data was being lost while using your system.

DRAM Settings

The first chipset settings deal with CPU access to dynamic random access memory

(DRAM).

Auto Configuration

Pre-defined values for DRAM, cache.. Timing according to CPU type & system clock.

The Choice: Enabled, Disabled.

Note: When this item is enabled, the pre-defined items will become SHOW-ONLY.

AT Bus Clock

this item allows you to select 7.16MHZ, CLK2/2, CLK2/3, CLK2/4, CLK2/5, CLK2/6, clocks. The default is clk2/4.

Async. SRAM Read/Write WS

This item allows you to select x-3-3-3, x-2-2-2. The default is x-3-3-3.

EDO Read WS

This item allows you to select x-3-3-3, x-2-2-2. The default is x-3-3-3.

Page Mode Read WS

This item allows you to select x-3-3-3, x-4-4-4. The default is x-3-3-3.

DRAM Write WS

This item allows you to select x-3-3-3, x-2-2-2. The default is x-2-2-2.

CPU to DRAM Page Mode

The default is Disabled.

DRAM Refresh Period

This item allows you to select 15us, 30us, 60us, 120us. The default is 60us.

DRAM Date Integrity Mode

This item allows you to select between two methods of DRAM error checking, ECC and Parity. The default is Parity.

Pipelined Function

This item allows you to select Disabled, Enabled, Turbo. The default is Disabled.

16 Bit ISA I/O, Mem Command WS

This item allows you to select Normal, 1 to 3 Wait . The default is 2 Wait.

Local Memory 15-16M

This item allows you to select Disabled, Enabled . The default is Enabled.

Passive Release

This item allows you to select Disabled, Enabled . The default is Enabled.

ISA Line Buffer

This item allows you to select Disabled, Enabled . The default is Enabled.

Delay Transaction

This item allows you to select Disabled, Enabled . The default is Enabled.

Primary Frame Buffer

This item allows you to select Disabled. 1,2,4,8,16MB. The default is 2MB.

VGA Frame Buffer

This item allows you to select Disabled, Enabled. The default is Enabled.

Linear Merge

This item allows you to select Disabled, Enabled. The default is Enabled.

Word Merge

This item allows you to select Disabled, Enabled. The default is Enabled.

Byte Merge

This item allows you to select Disabled, Enabled. The default is Disabled.

Fast Back-to-Back

The default is Disabled.

PCI Write Burst

This item allows you to select Disabled, Enabled. The default is Disabled

M1 Linear Burst Mode

This item allows you to select Disabled, Enabled. The default is Disabled.

Integrated Peripherals

ROM PCI/ISA BIOS (2A5KKF9A)
INTEGRATED PERIPHERALS
AWARD SOFTWARE, INC.

On-Chip Primary IDE	: Enabled	KBC Clock Source	: 8MHZ
Master PIO	: Auto	Onboard FDC Controller	: Enabled
Slave PIO	: Auto	Onboard Uart Port 1	: 3F8/IRQ4
Master Ultra DMA	: Auto	Onboard Uart Port 2	: 2F8/IRQ3
Slave Ultra DMA	: Auto		
On-Chip Secondary IDE	: Enabled	Onboard Parallel Port	: 378/IRQ7
Master PIO	: Auto	Parallel Port Mode	: ECPEPP1.9
Slave PIO	: Auto	ECP Mode USE DMA	: 3
Master Ultra DMA	: Auto	Onboard IRDA Port	: Disabled
Slave Ultra DMA	: Auto		
IDE HDD Block Mode	: Enabled		
On-Chip USB Controller	: Disabled		
Init AGP Display First	: PCI Slot	ESC : Quit	↑↓→← : Select Item
Ring /Wake on Lan Controller	: Disabled	F1 : Help	PU/PD/+/- : Modify
RTC Alarm Controller	: Disabled	F5 : Old Values	(Shift) F2 : Color
		F6 : Load BIOS	
Power on function	:Button Only	Defaults	
		F7 : Load Setup	
		Defaults	

IDE HDD Block Mode

This allows your hard disk controller to use the fast block mode to transfer data to and from your hard disk drive (HDD).

Enabled	IDE controller uses block mode.
Disabled	IDE controller uses standard mode.

Enabled is the default.

PCI Slot IDE 2nd Channel

This item allows you designate an IDE controller board inserted into one of the physical PCI slots as your secondary IDE controller.

Enabled	External IDE controller designated as the secondary controller
---------	----------------------------------------------------------------

Disabled	No IDE controller occupying a PCI slot.
----------	-----------------------------------------

Enabled is the default.

IDE PIO

IDE hard drive controllers can support up to two separate hard disk drivers. These drives have a master / slave relationship which are determined by the cabling configuration used to attach them to the controller. Your system supports two IDE controllers-a primary and a secondary-so you have to ability to install up to four separate hard disks.

PIO means Programmed Input / Output. Rather than have the BIOS issue a series of commands to effect a transfer to or from the disk drive, PIO allows the BIOS to tell the controller what it wants and then let the controller and the CPU perform the complete task by themselves. This simpler and more efficient (and faster).

Your system supports five modes, numbered from 0 (default) to 4, which primarily differ in timing. When *Auto* is selected, the BIOS will select the best available mode. This is true for the next four setup items.

1. IDE Primary Master PIO 2. IDE Primary Slave PIO
- 2.IDE Secondary Master PIO 4. IDE Secondary Slave PIO

Power on/off function

This item allows you to select **BUTTON ONLY AND HOT KEY**

If you select the hot key 1,2,3 .

Ex: press the , + you can choice for your hot key

Ex :AB+C.....

Press 1,2 first then press 3,you can not press the 1,2,3.,together

You can use the hot key power on your pc,and you still can use the hot key Power off your pc.

On-Chip Primary PCI IDE

As stated above, your system includes two built-in IDE controllers, both of which operate on the PCI bus. This setup item allows you either to enable or disable the primary controller. You might choose to disable the controller if you were to add a higher performance or specialized controller.

Enabled	Primary HDD controller used-Default
Disabled	Primary HDD controller not used.

On-Chip Secondary PCI IDE

As above for the Primary controller, this setup item you either to enable or disable the secondary controller. You might choose to disable the controller if you were to add a higher performance or specialized controller.

Enabled	Primary HDD controller used
---------	-----------------------------

Disabled	Primary HDD controller not used.
----------	----------------------------------

Enabled is the default

3.6 Setup Power Management

The Power Management Setup allows you to configure your system to most effectively save energy while operating in a manner consistent with your own style of computer use.

ROM PCI/ISA BIOS (2A5KKF9A)
POWER MANAGEMENT SETUP
AWARD SOFTWARE. INC.

ACPI Function	: Enabled	** External Switch **
Power Management	: User Define	Power Button : Power Off
PM Control by APM	: Yes	DOCK I/O SMI ; Disabled
MODEM Use IRQ	: 3	AC Power SMI : Disabled
Video Off Option	: Susp, Stby -> Off	Thermal SMI : Disabled
Video Off Method	: DPMS Support	
** PM Monitor **		
HDD Power Down	: Disabled	
Doze Mode	: Disabled	
Standby Mode	: Disabled	
Suspend Mode	: Disabled	
Throttle Duty Cycle	: 62.5% -75%	
** PM Events **		
Bus Master	: Disabled	
Primary HDD	: Disabled	ESC : Quit ↑↓→←: Select
Floppy	: Disabled	F1 : Help Item
COM Ports	: Enabled	F5 : Old Values PU/PD/+/- : Modify
Keyboard	: Enabled	F6 : Load BIOS Defaults (Shift) F2 : Color
LPT Ports	: Disabled	F7 : Load Setup Defaults

Power Management

This category allows you to select the type (or degree) of power saving and is directly related to the following modes:

1. Doze Mode
2. Standby Mode
3. Suspend Mode
4. HDD Power Down

There are four selections for Power Management, three of which have fixed mode settings.

Disable (default)	No power management. Disables all four modes
Min. Power Saving	Minimum power management. Doze Mode = 1 hr. Standby Mode = 1 hr., Suspend Mode = 1 hr., and HDD Power Down = 15 min.
Max. Power Saving	Maximum power management -ONLY AVAILABLE FOR SL CPU'S . Doze Mode = 1 min., Standby Mode = 1 min., Suspend Mode = 1 min., and HDD Power Down = 1 min.
User Defined	Allows you to set each mode individually. When not disabled, each of the ranges are from 1 min. to 1 from 1 min. to 15 min. and disable.

PM Control APM

When enabled, an Advanced Power Management device will be activated to enhance the Max. Power Saving mode and stop the CPU internal clock.

If the Max. Power Saving is not enabled, this will be preset to *No*.

Video Off Method

This determines the manner in which the monitor is blanked.

V/H SYNC+Blank	This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.
Blank Screen	This option only writes blanks to the video buffer.
DPMS	Initial display power management signaling.

PM Timers

The following four modes are Green PC power saving functions which are only user configurable when User Defined Power Management has been selected. See above for available selections.

Doze Mode

When enabled and after the set time of system inactivity, the CPU clock will run at slower speed while all other devices still operate at full speed.

Standby Mode

When enabled and after the set time of system inactivity, the fixed disk drive

and the video would be shut off while all other devices still operate at full speed.

Suspend Mode

When enabled and after the set time of system inactivity, all devices except the CPU will be shut off.

HDD Power Down

When enabled and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

Power Down & Resume Events

Power Down and Resume events are I/O events whose occurrence can prevent the system from entering a power saving mode or can awake the system from such a mode. In effect, the system remains alert for anything which occurs to a device which is configured a *On*, even when the system is in a power down mode.

As above, the choices are *On and Off*. *Off* is the default.

When set *On*, activity will neither prevent the system from going into a power management mode nor awake it.

- IRQ3 (COM2)
- IRQ4 (COM1)
- IRQ5 (LPT2)
- IRQ6 (Floppy Disk)
- IRQ7 (LPT1)
- IRQ8 (RTC Alarm)
- IRQ9 (IRQ2 Redir)
- IRQ10 (Reserved)
- IRQ11 (Reserved)
- IRQ12 (Reserved)
- IRQ13 (Coprocessor)
- IRQ14 (Hard Disk)
- IRQ15 (Reserved)

Soft-off By PWR-BTTN (For ATX POWER ONLY)

This item allows you to select Delay 4 sec or Instant-off.

Resume By Ring (For ATX POWER ONLY)

This item allows you to select Disabled ,Enabled.

If a Fax Modem was connected with serial ports, the computer will be awake when it received a signal from outside.

Resume By Ring, Setup for MS-DOS mode

1. Select Resume By Ring: Enabled
2. Save the Value and Exit. This system will Reboot.
3. Power off your system by pressing the power button on the panel.

Resume By Ring, Setup for WIN95 mode

1. Select Resume By Ring: Enabled
2. Save the Value and Exit. This system will Reboot.
3. When you want leave WIN95 , select Shut down. The power off by software

Resume By Alarm (For ATX POWER ONLY)

This item allows you to select Disabled ,Enabled.

Which allows the user setting date(Day/Hour/Minute)

in advance for turning on the system with a range in 30 days.

The system will be awake on the date according to the user' setup.

Resume By Alarm Setup for MS-DOS mode

1. Select Resume By Alarm: Enabled
2. Set the (Day/Hour/Minute) you desire to wake up your system
3. Save the Value and Exit. This system will Reboot.
4. Power off your system by pressing the power button on the panel.

Resume By Alarm Setup for win95 mode

1. Select Resume By Alarm: Enabled
2. Set the (Day/Hour/Minute) you desire to wake up your system
3. Save the Value and Exit. This system will Reboot.
4. When you want leave WIN95 , select Shut down. The power off by software

.7 Setup PnP/PCI Configuration

This section describes configuring the PCI bus system. PCI, or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

ROM PCI/ISA BIOS (2A5KKF9A)
 PNP/PCI CONFUGURATION
 AWARD SOFTWARE. INC.

PNP OS Installed : No	PCI IDE 2 nd Channel : Disabled
Resources Controlled by : Manual	PCI IRQ Actived By : Level
Resources Configuration Data : Disabled	PCI IDE IRQ Map To : ISA
IRQ-3 assigned to : Legacy ISA	
IRQ-4 assigned to : Legacy ISA	
IRQ-5 assigned to : PCI/ISA PnP	
IRQ-7 assigned to : Legacy ISA	
IRQ-9 assigned to : PCI/ISA PnP	
IRQ-10 assigned to : PCI/ISA PnP	
IRQ-11 assigned to : PCI/ISA PnP	
IRQ-12 assigned to : PCI/ISA PnP	
IRQ-14 assigned to : Legacy ISA	
IRQ-15 assigned to : Legacy ISA	
DMA-0 assigned to : PCI/ISA PnP	ESC : Quit ↑↓→← : Select Item
DMA-3 assigned to : PCI/ISA PnP	F1 : Help PU/PD/+/- : Modify
DMA-5 assigned to : PCI/ISA PnP	F5 : Old Values (Shift) F2 : Color
DMA-6 assigned to : PCI/ISA PnP	F6 : Load BIOS
DMA-7 assigned to : PCI/ISA PnP	Defaults
	F7 : Load Setup
	Defaults

Resource Controlled by

The Award Plug and Play BIOS has the capacity to automatically configure all of the boot and Plug and Play compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play Operating system such as Windows® 95.

Choices are Auto and Manual (default).

Reset Configuration Data

This item allows you to determine reset the configuration data or not.

Choices are Enabled and Disabled (default).

IRQ3/4/5/7/9/10/11/12/14/15, DMA0/1/3/5/6/7 assigned to

This item allows you to determine the IRQ / DMA assigned to the ISA bus and is not available to any PCI slot.

Choices are *Legacy ISA* and *PCI/ISA PnP*.

PCI IRQ Activated by

This sets the method by which the PCI bus recognizes that an IRQ service is being requested by a device. Under all circumstances, you should retain the default configuration unless advised otherwise by your system's manufacturer.

Choices are *Level* (default) and *Edge*.

PCI IDE IRQ MAP to

This allows you to configure your system to the type of IDE disk controller in use. By default, Setup assumes that your controller is an ISA (Industry Standard Architecture) device rather than a PCI controller. The more apparent difference is the type of slot being used.

If you have equipped your system with a PCI controller, changing this allows you to specify which slot has the controller and which PCI interrupt (A, B, C or D) is associated with the connected hard drives.

Remember that this setting refers to the hard disk drive itself, rather than individual partitions. Since each IDE controller supports two separate hard disk drivers, you can select the INT# for each. Again, you will note that the primary has a lower interrupt than the secondary as described in "*Slot x Using INT#*" above.

Selecting *I* allows the system to automatically determine how your IDE disk system is configured.

The default timings have been carefully chosen and should only be altered if data is being lost. Such a scenario might well occur if your system had mixed speed DRAM chips installed so that greater delays may be required to preserve the integrity of the data held in the slower memory chips.

